

N17-4E开合帘电机与轨道系统说明书


公司保留更改产品设计与说明书的版权，届时将另行通知，图片仅供参考，具体以实物为准。 A/2 H12058

承载力参数表 单位:(kg)注: 双开 $\frac{\text{---}}{\text{---}}$ 单开 --- 我们推荐使用下面公式来计算面料的重量: 面料的重量=单位面积面料重量kg/m² × 面料覆盖面积m² × 折皱率


2N.m单电机	轨道样式 面料长度 承重								
		R500	R500	R500	R500	R500	R500	R3000	R3000
		4m	60	50	45	40	35	30	21
		8m	55	45	40	35	30	25	16
		12m	50	40	35	30	25	20	—

说明: 1、图表中, 列出了2N.m单电机配合不同轨道设置(长度/打开方式等)时最大承重。当计算电机最大承重时, 面料的折皱率也要考虑进去。
2、图表中, 电机最大承重没有考虑面料与轨道或窗帘箱摩擦而需要的额外的动力。


轨道机构图及配件说明

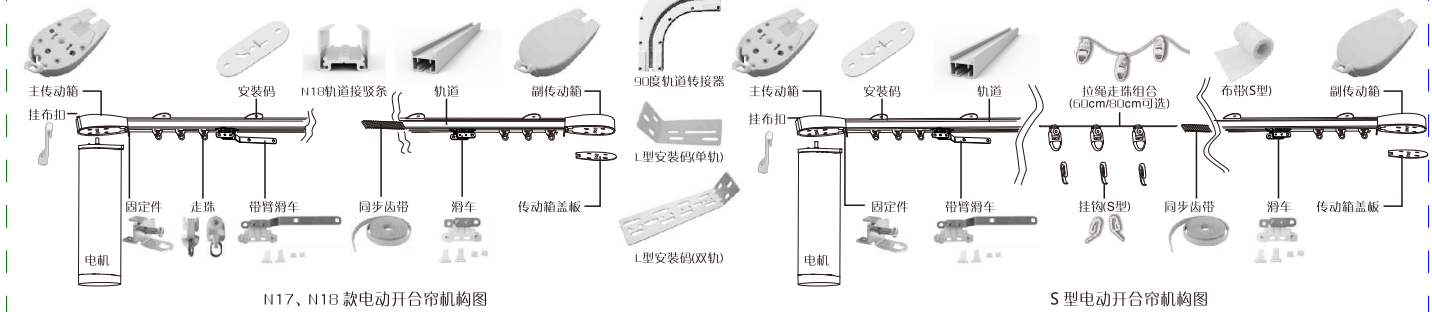


轨道系统组装说明

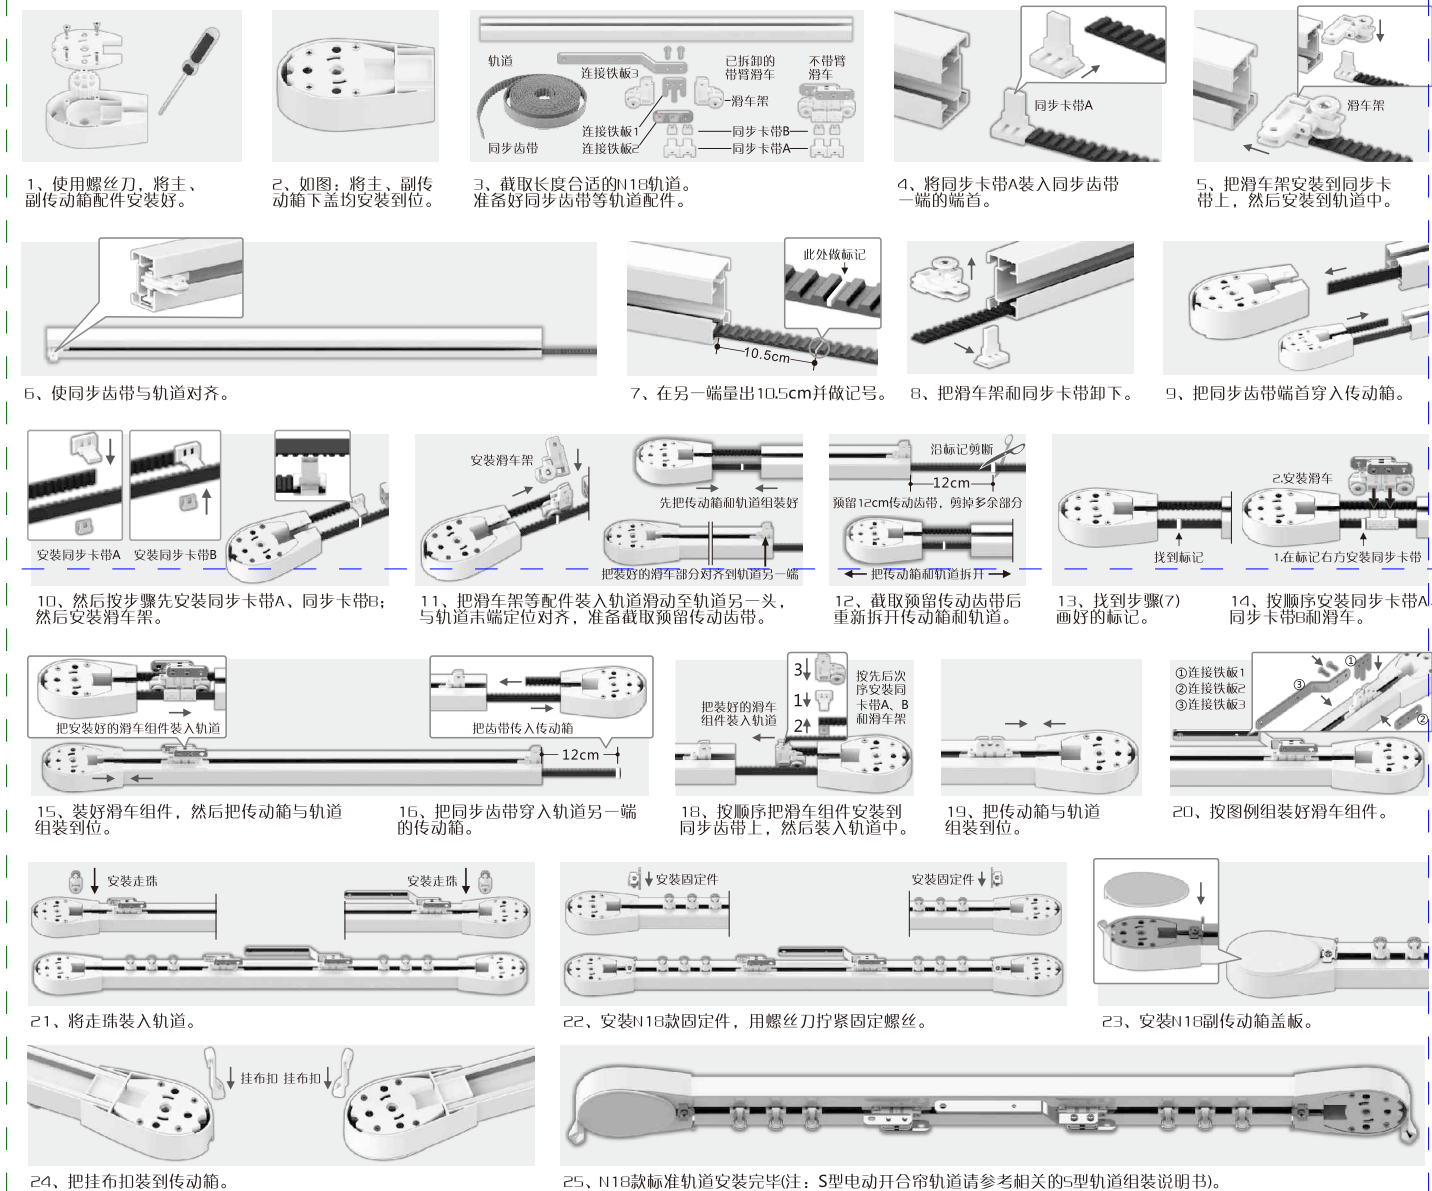


轨道以及电机的安装和拆卸

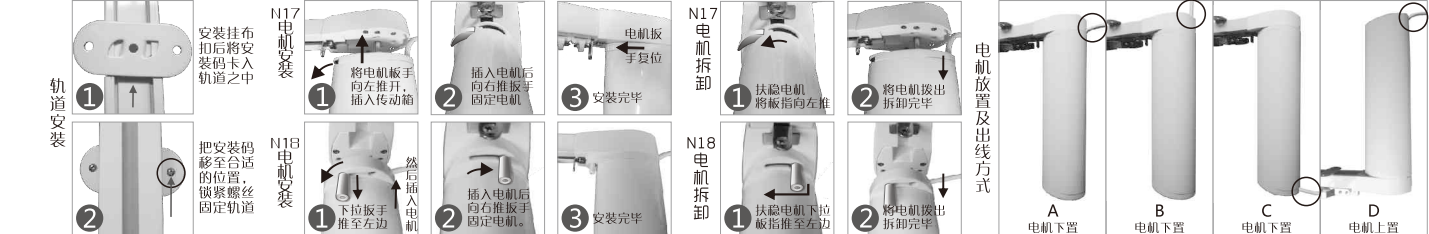

接线口开关接线方法

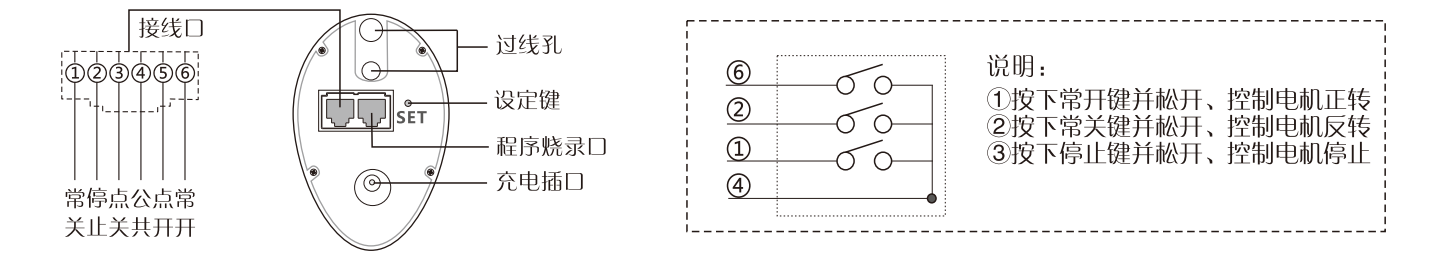

操作说明

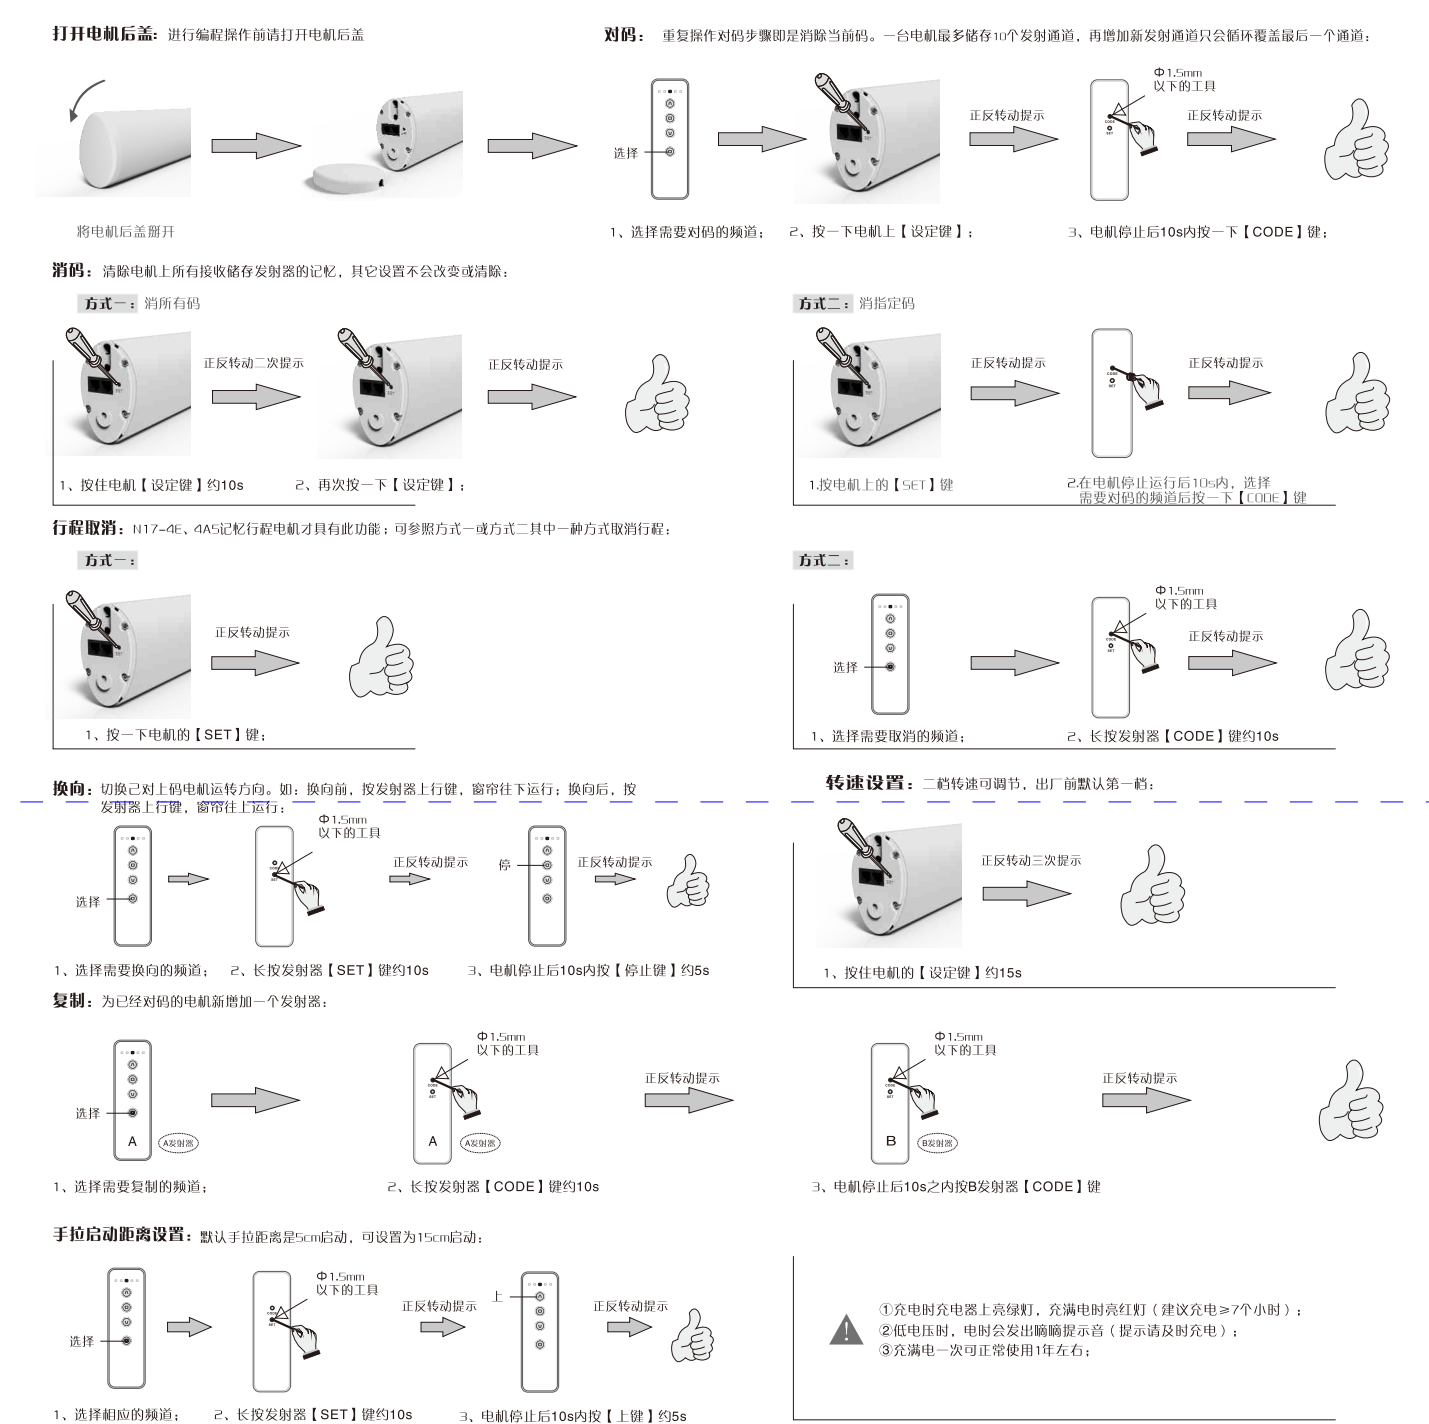

- ① 充电时充电器上亮绿灯，充满电时亮红灯（建议充电≥7个小时）；
- ② 低电压时，电机发出嘀嘀提示音（提示请及时充电）；
- ③ 充满电一次可正常使用1年左右；

N17-4ECurtain motor & Track system manual

Company reserves the right to change product design and specifications without prior notice then ,photos are for reference only. A/2 H12058


B Bearing Capacity Parameter Table

Units: (Kg) Remark: Double  Single 
Here by we recommend the formula to calculate the fabric weight as follows: fabric weight=fabric weight Kg/ m² x fabric area covered m² x wrinkles rate.


2N.m single motor	Track style Loading weight									
	Fabric length				R500	R500	R500	R500	R3000	R3000
	4m		60	50	45	40	35	30	31	21
	8m		55	45	40	35	30	25	21	16
	12m		50	40	35	30	25	20	—	—

Description: 1. The chart shows the maximum load bearing of 2N. m single motor with different track settings (length/opening way, etc.).
When calculating the maximum load bearing, the fabric wrinkle rate should also be taken into account.
2. In the chart, the maximum load bearing does not consider the friction between fabric and track or curtain box.


C Curtain Motor Structural Drawing

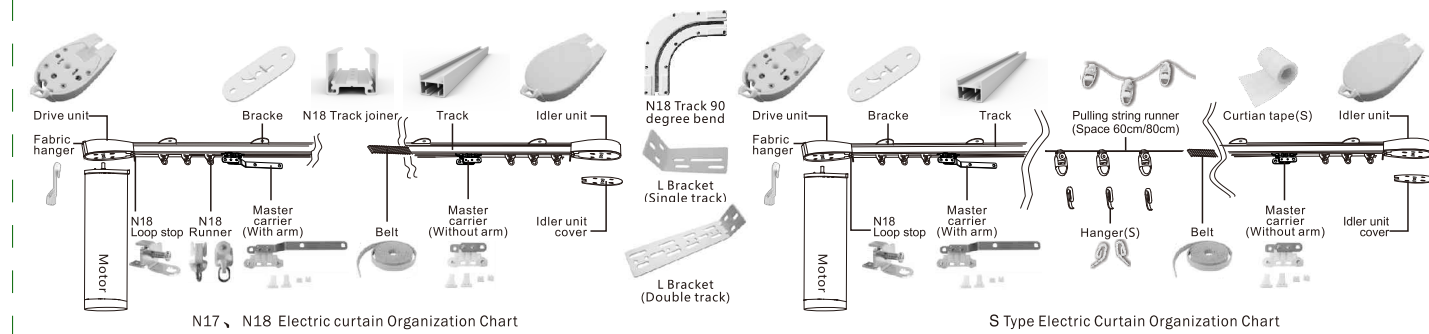


T The track system the assembly instruction

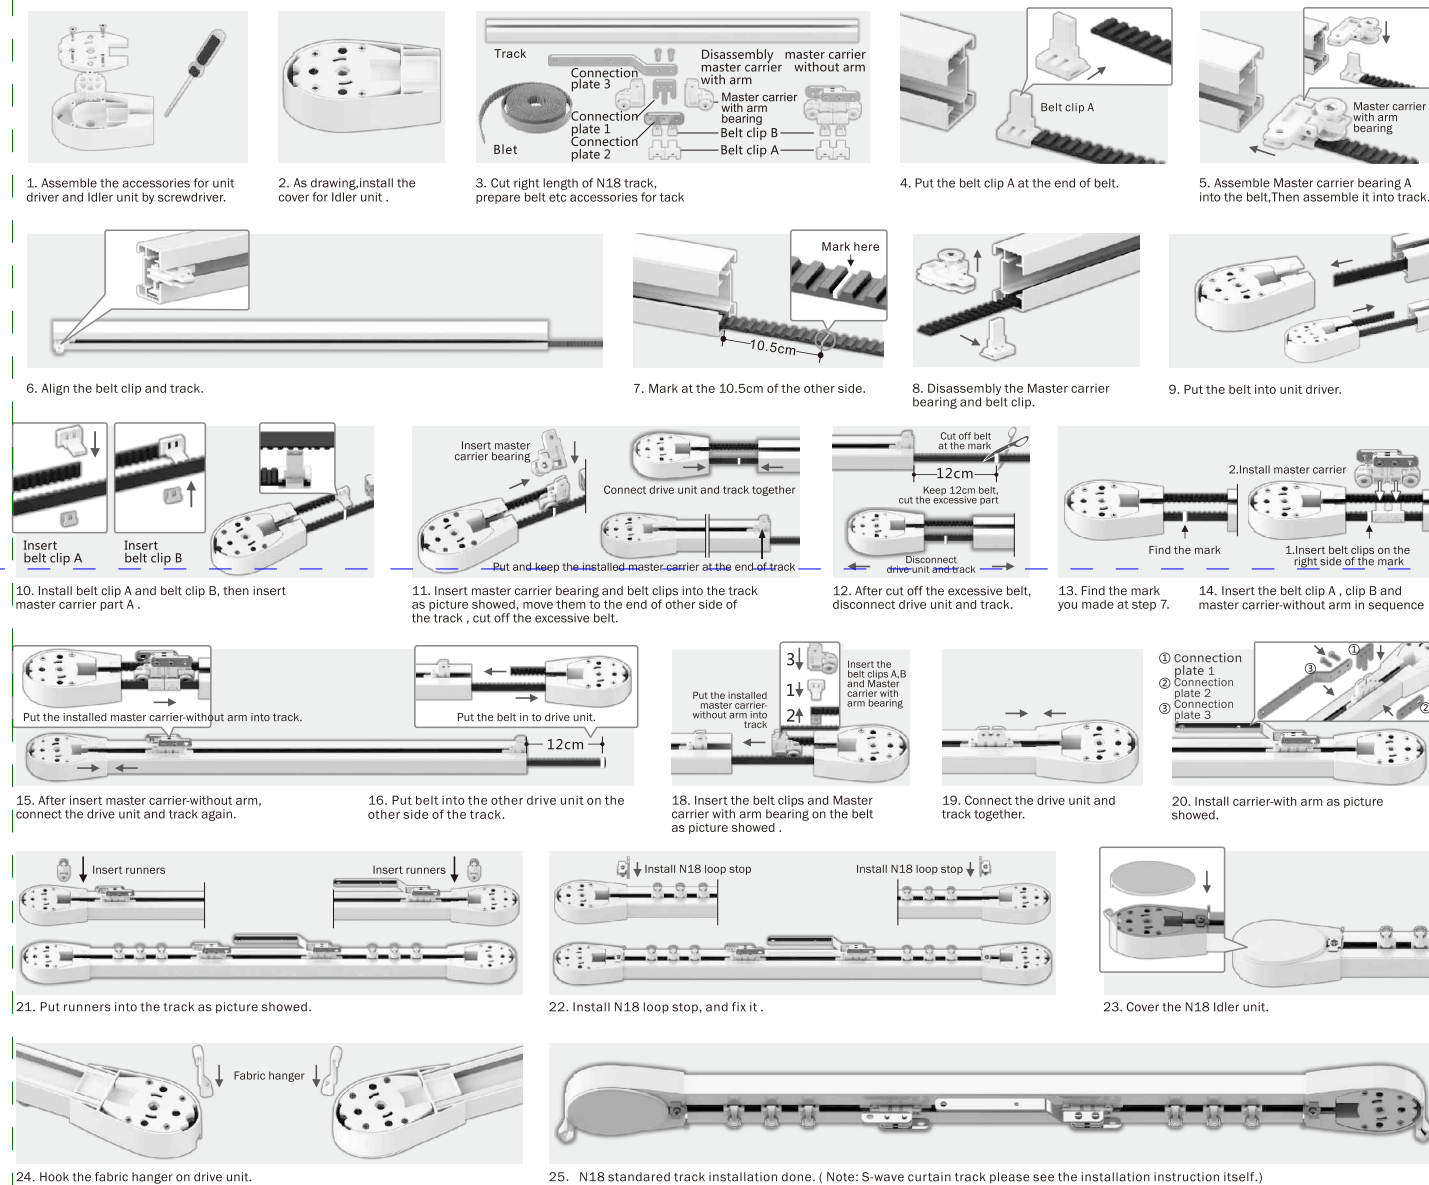

I Installation and dis assembly of track and motor






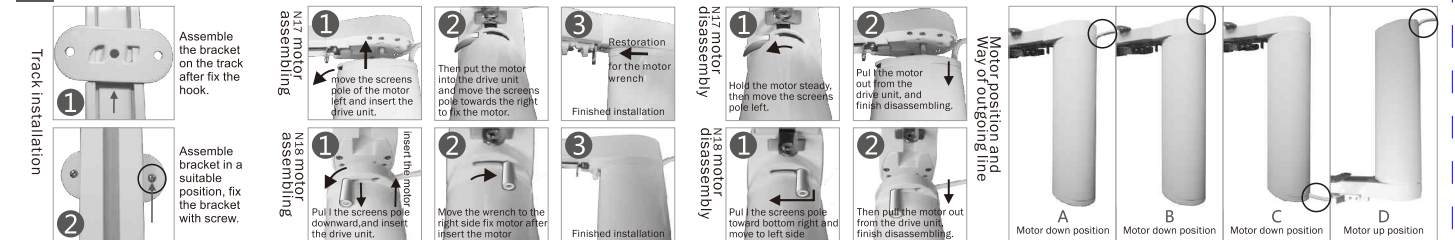


C Connection way

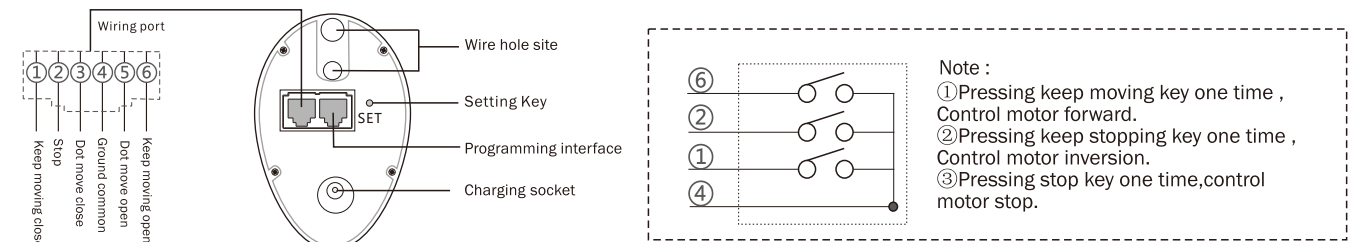

I Instructions

Open the motor cover: Open the motor cover before you operate.
Pairing transmitter and motor : Repeat the pairing operation once to eliminate the current pairing. A motor stores up to 10 transmitter channels. Adding a new transmitter channel will cover the earliest channel. For example, current paired channels are 1-10. If you add channel 11, paired channels will be 2-11.

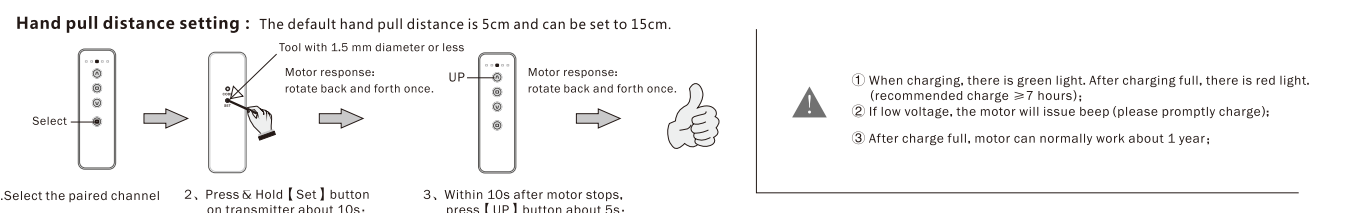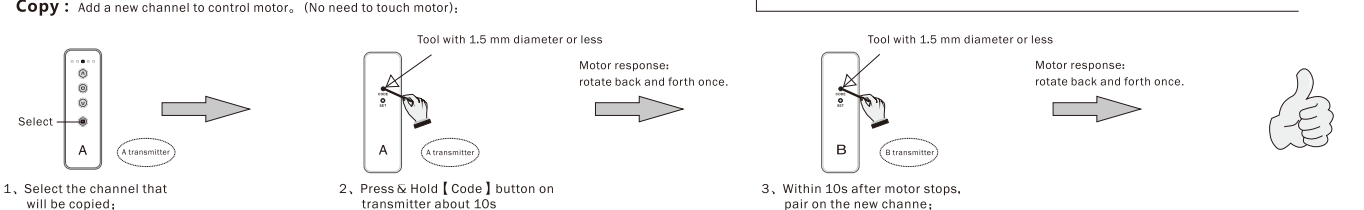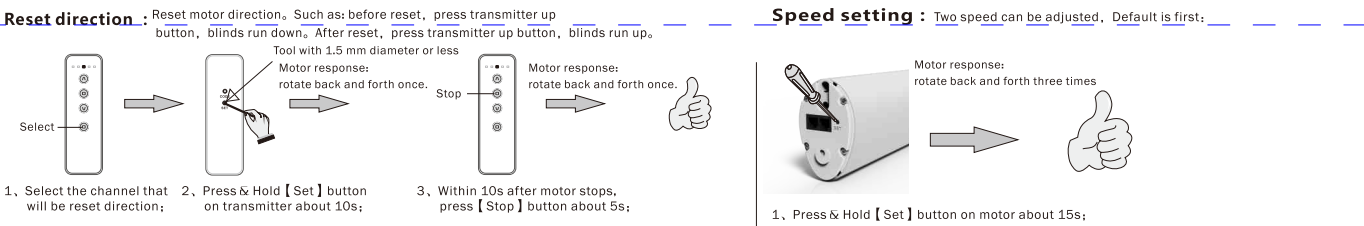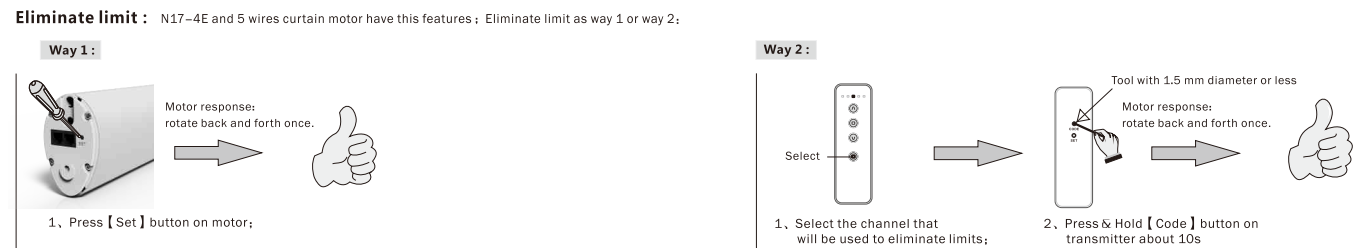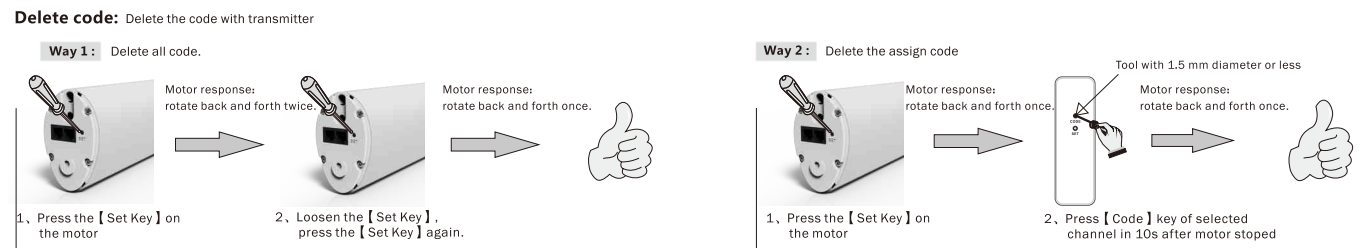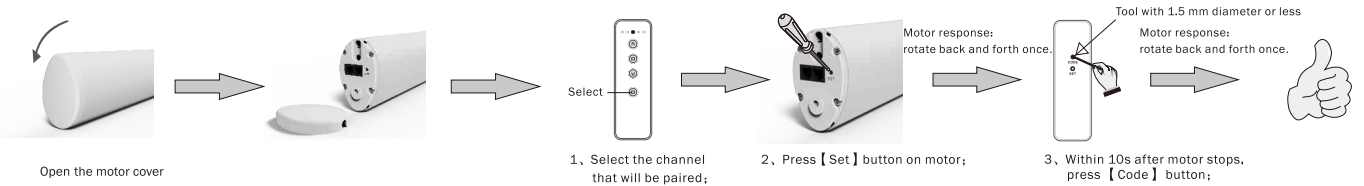

- ① When charging, there is green light. After charging full, there is red light. (recommended charge ≥ 7 hours);
- ② If low voltage, the motor will issue beep (please promptly charge);
- ③ After charge full, motor can normally work about 1 year;