

E24-3E天棚帘电机 II 说明书

公司保留更改产品设计与说明书的权利，届时将不另行通知，图片仅供参考，具体以实物为准。


A/1 H12152

产品简介

1. 输入电压: DC5V 2A




产品机构图

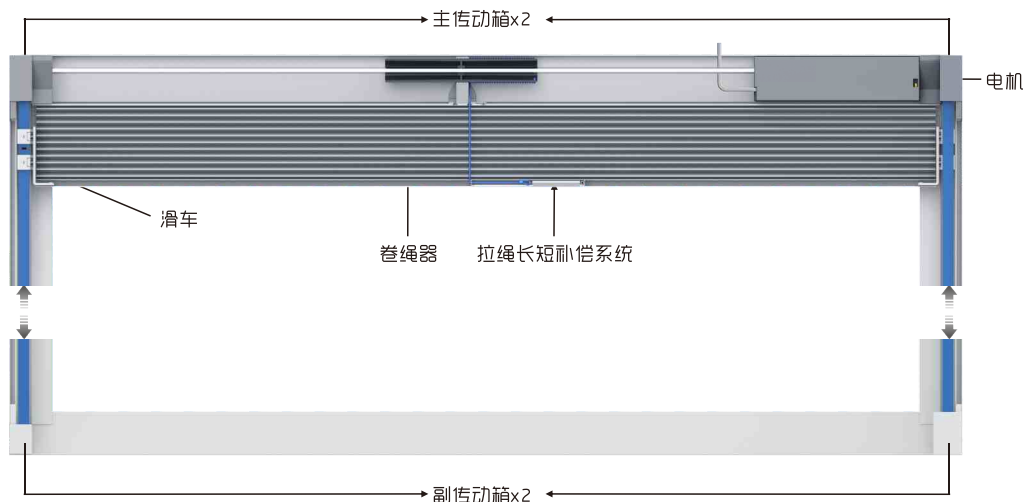

操作说明 (以A13按键发射器为例进行说明, 其它请参考相应的说明书。)

对码: 重复操作对码步骤即是消除当前码。一台电机最多储存5个发射通道, 再增加新发射通道只会循环覆盖前一个通道:

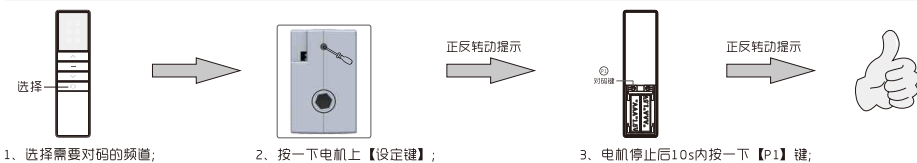


消码: 清除电机上所有接收储存发射器的记忆, 其它设置不会改变或清除:



1. 按住电机【设定键】约10s

2. 再次按一下【设定键】;

 点动/连动模式互换: 电机出厂默认认为连动模式, 切换为点动模式后, 长按住【上行键】或【下行键】约2s电机一直连动运转:



1. 选择已对上码的频道;

2. 长按发射器【P2】键约10s

3. 电机停止后10s内按【上行键】约5s

复制: 为已经对码的电机新增加一个发射器:




1. 选择已对上码的频道;

2. 长按发射器【P1】键约10s

3. 电机停止后10s之内按B发射器【P1】键

换向: 切换已对上码电机运转方向。如: 换向前, 按发射器上行键, 窗帘往下运行; 换向后, 按发射器上行键, 窗帘往上运行:

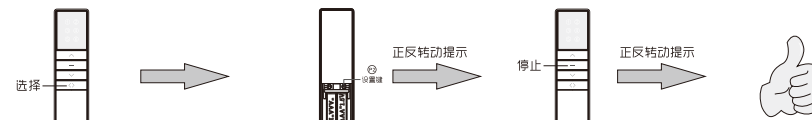


1. 选择已对上码的频道;

2. 长按发射器【P2】键约10s

3. 电机停止后10s内按【停止键】约5s

设置行程:

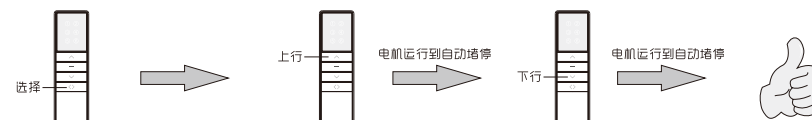

1. 选择已对上码的频道;

2. 按发射器【上行】键

3. 按发射器【下行】键

行程微调: 默认行程到位有间隙, 可以设置为无间隙




1. 选择已对上码的频道;

2. 按发射器【P2】键

3. 按发射器【下行】键

删除行程: 方式一: 在有行程状态下运行过程中堵停一次则会清除行程

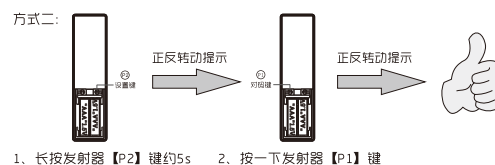


方式二:

1. 长按发射器【P2】键约5s

2. 按一下发射器【P1】键

转速设置: 二档转速可调节, 出厂前默认第一档:

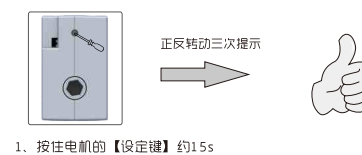

1. 按住电机的【设定键】约15s

E24-3E Skylight Motor II Operating Manual

Company reserves the right to change product design and specifications without prior notice then, photos are for reference only.


A/1 H12152

Features

Input voltage: AC100-240V




System diagram

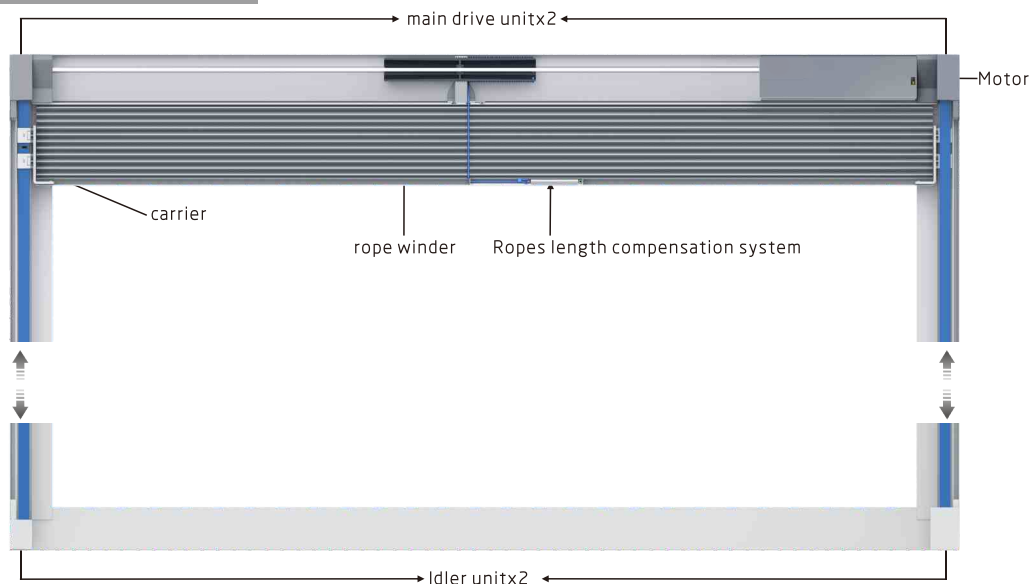


I Instructions (*Take A13 button transmitter as an example. For other transmitters, please refer to the corresponding transmitter manual.)


Pairing transmitter and motor : Repeat the pairing operation once to eliminate the current pairing. A motor stores up to 5 transmitter channels. Adding a new transmitter channel will cover the earliest channel. For example, current paired channels are 1-5. If you add channel 6, paired channels will be 2-6. :

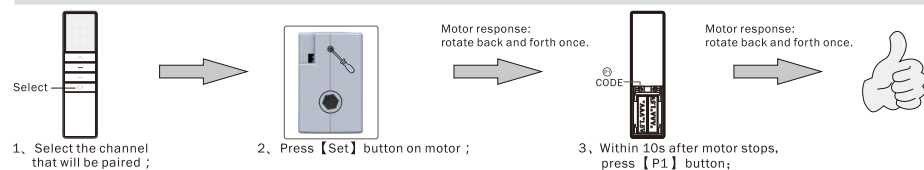


Clear pairing : Clear all pairing on the motor :

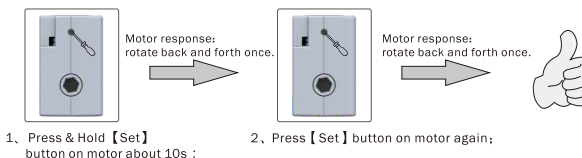


Inching / Continuous moving interchange : Default is continuous moving. After switching to inching moving, press & hold [Up] or [Down] button about 2s, motor will continuously moves;

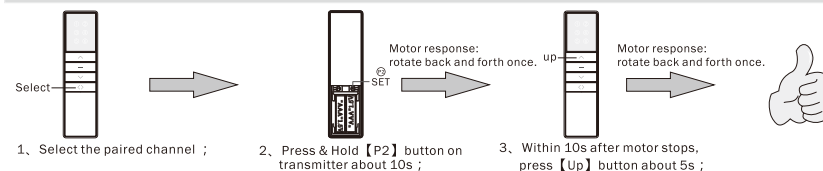


Copy : Add a new channel to control motor. (No need to touch motor);

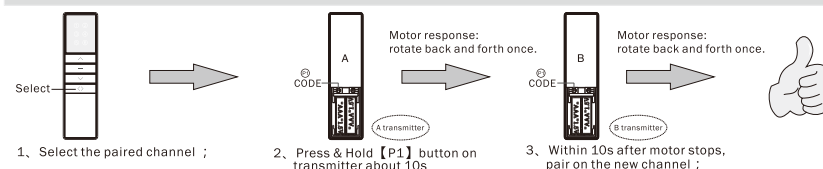


Reset direction : Reset motor direction. Such as: before reset, press transmitter up button, blinds run down. After reset, press transmitter up button, blinds run up.

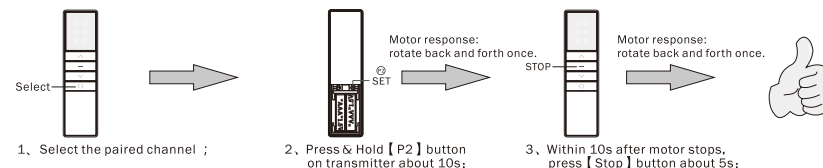


Limit Setting :

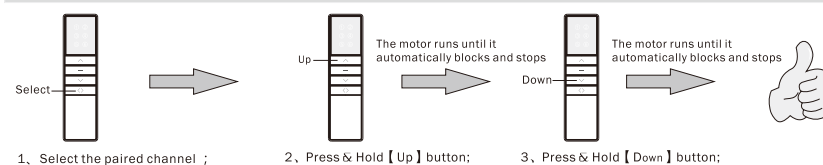

Precise limit: there is a gap in the default limit position, and it can be set to no gap.

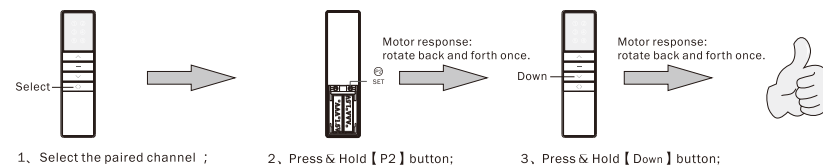

Delete limit : Mode1: When there is limit, and when motor is blocked and stopped once during operation, the limit will be deleted.

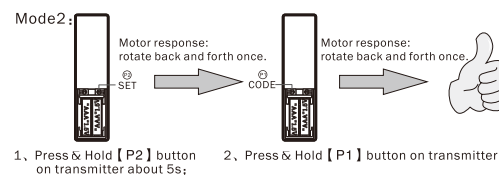

Speed setting : Two speed can be adjusted. Default is first.

