


E24内置单轴百叶电机说明书

E24-EL-SA-1
E24-EL-SA-1.3
内嵌无线控制系统


公司保留更改产品设计与说明书的权利,届时将不另行通知,图片仅供参考,具体以实物为准。 H12010 A/6

百叶帘机构图

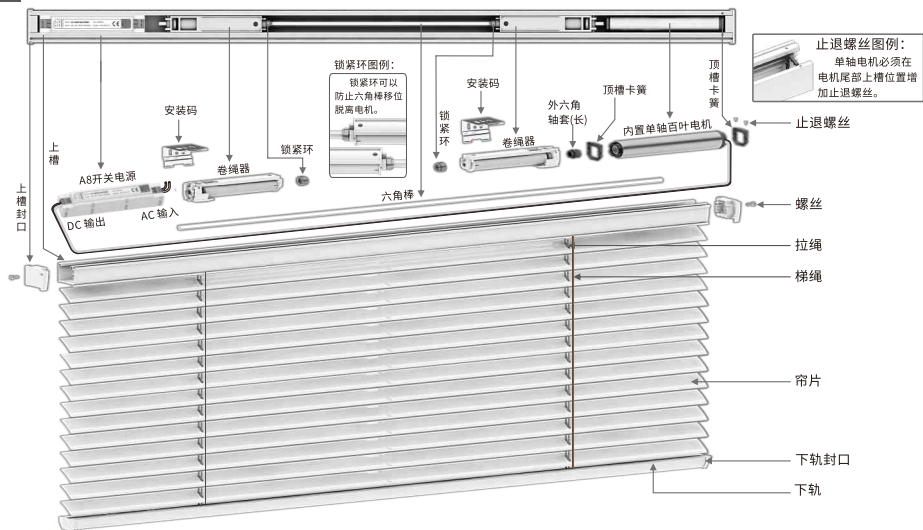

操作说明 (*以A3按键发射器为例进行说明,其它发射器请参考相应的发射器说明书。)


对码: 重复操作对码步骤即是消除当前码。一台电机最多储存10个发射通道,再增加新发射通道只会循环覆盖最后一个通道:

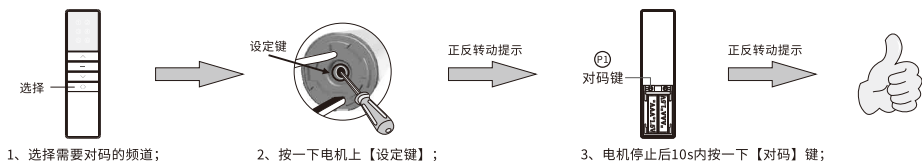

消码: 清除电机上所有接收储存发射器的记忆,其它设置不会改变或清除:




点动/连动模式互换: 电机出厂前默认为连动模式,切换为点动模式后,长按住【上行键】或【下行键】约2s电机会一直连动运转:

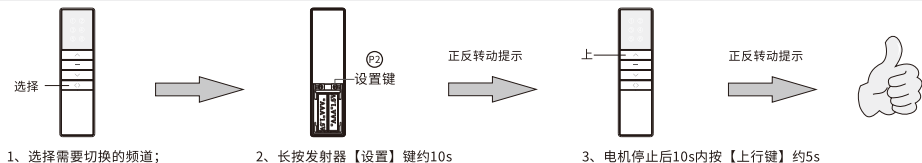




复制: 为已经对码的电机新增一个发射器:



换向: 切换已对上码电机运转方向。如:换向前,按发射器上行键,窗帘往下运行;换向后,按发射器上行键,窗帘往上运行:

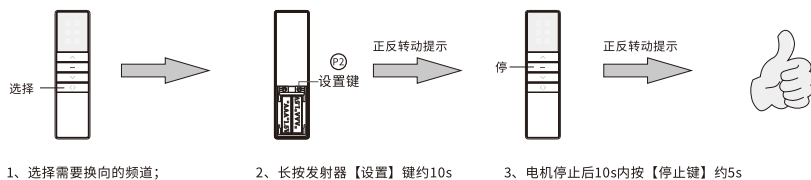


上、下行程设置: 指按发射器【上行键或下行键】时,卷帘向上/向下运行,所能到达的理想最高/最低位置。

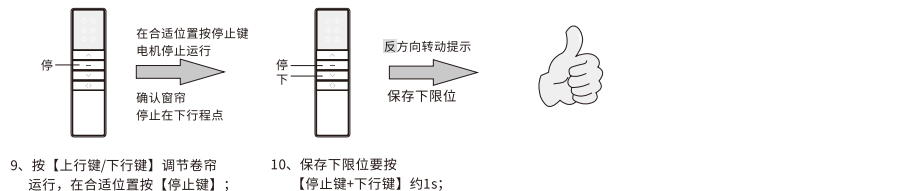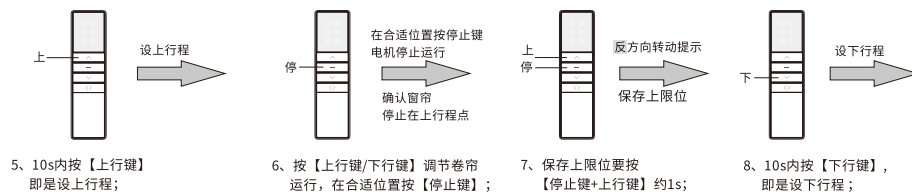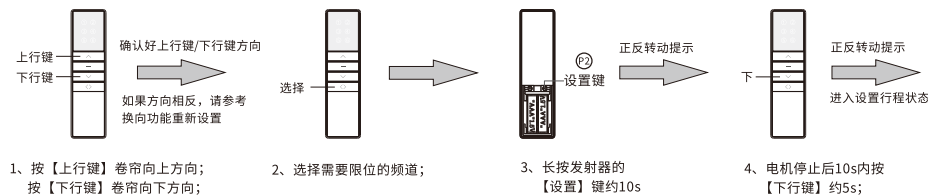

转速设置: 二档转速可调节,出厂前默认第一档:



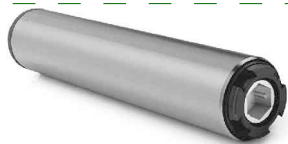

E24 In-bulit single end venetian motor specification


E24-EL-SA-1

E24-EL-SA-1.3

Build-in wireless control system


Company reserves the right to change product design and specifications without prior notice then, photos are for reference only. H12010 A/6

Electric venetian blind draft

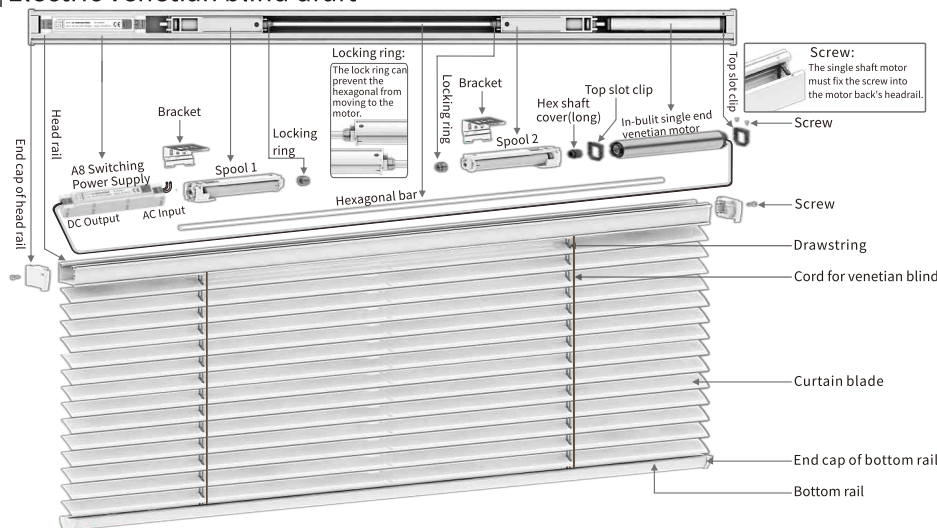


I Instructions (*Take A3 button transmitter as an example, For other transmitters, please refer to the corresponding transmitter manual.)


Pairing transmitter and motor: Repeat the pairing operation once to eliminate the current pairing. A motor stores up to 10 transmitter channels. Adding a new transmitter channel will cover the earliest channel. For example, current paired channels are 1-10. If you add channel 11, paired channels will be 2-11.

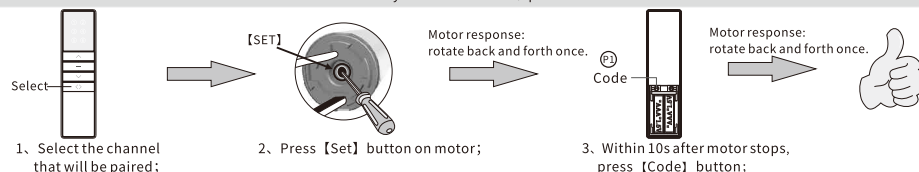


Clear pairing : Clear all pairing on the motor:

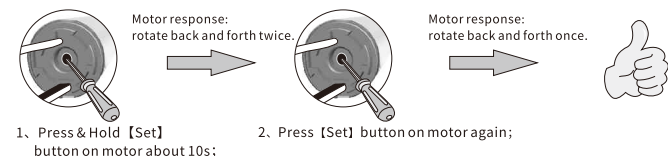


Inching / Continuous moving interchange: Default is continuous moving. After switching to inching moving, press & hold [Up] or [Down] button about 2s, motor will continuously moves;

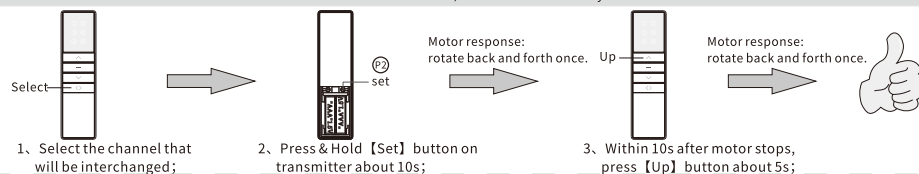




Copy: Add a new channel to control motor. (No need to touch motor):

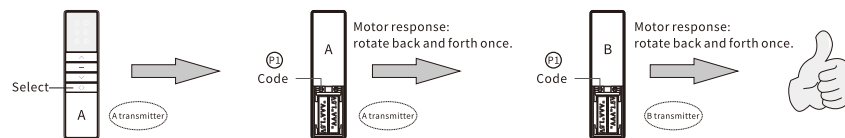

Reset direction : Reset motor direction. Such as: before reset, press transmitter up button, blinds run down. After reset, press transmitter up button, blinds run up.

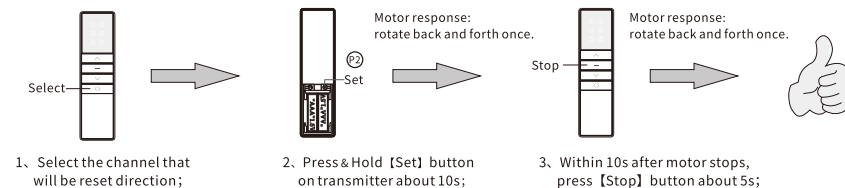

Adjusting Limits : When you press [Up] or [Down] button, the blinds will move up or down and stop automatically at the appointed position.

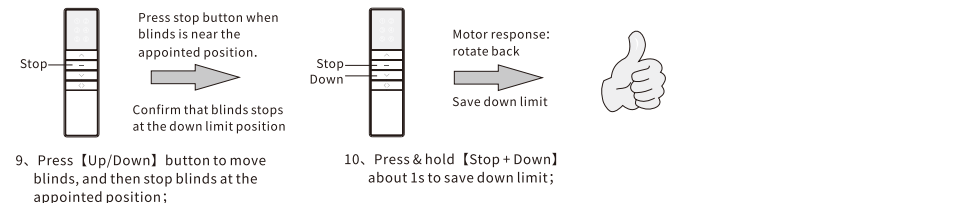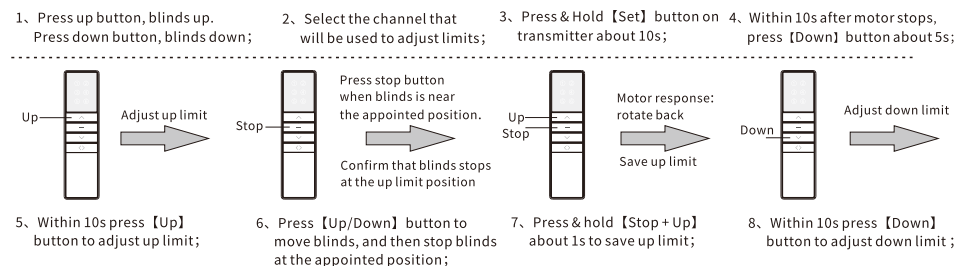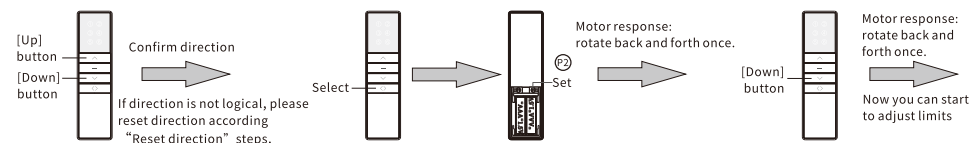

Speed setting : Two speed can be adjusted, Default is first:

