


Q2-LED右梦幻帘电机-NTY-WIFI-说明书


公司保留更改产品设计与说明书的权利，届时将不另行通知，图片仅供参考，具体以实物为准。

A/0 H12206

电机简介 以Q2-LED右梦幻帘电机-NTY-WIFI为例进行说明

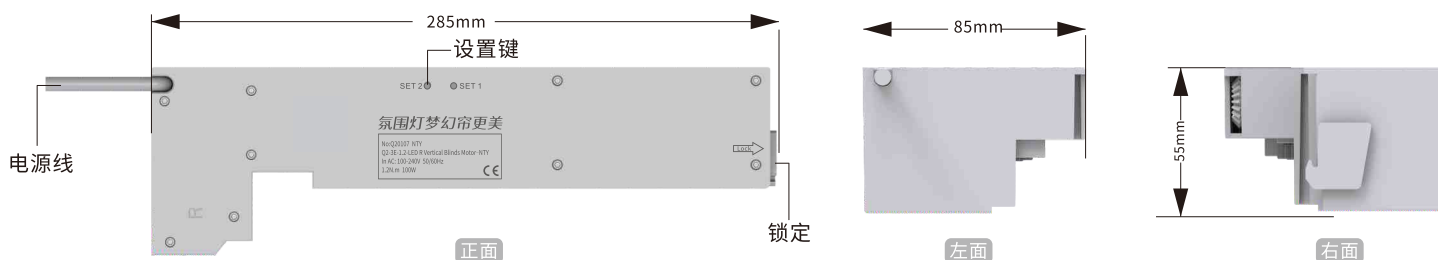


发射器简介

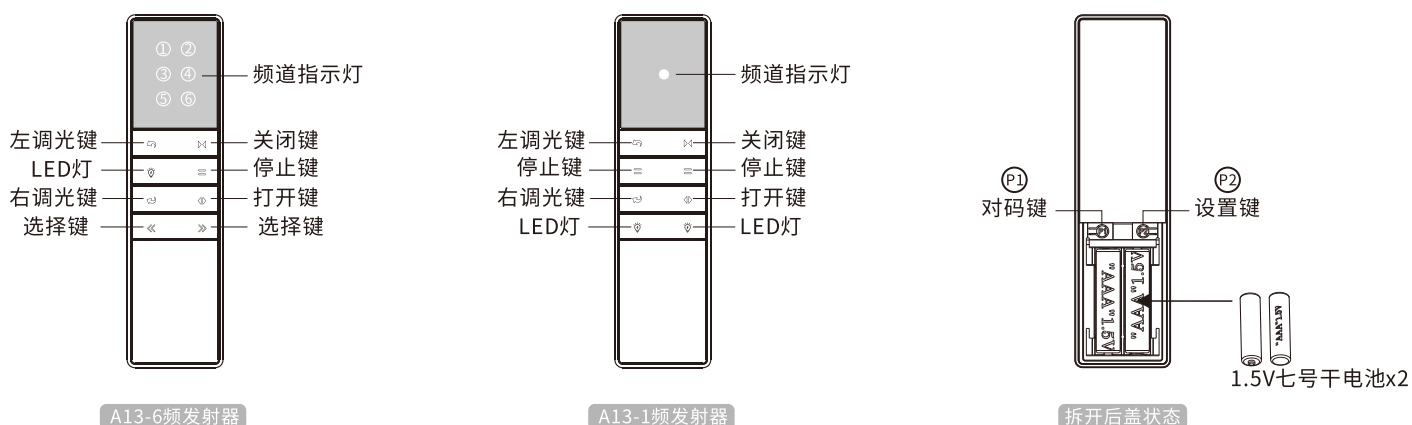


操作说明 (*以A13-6频按键发射器为例进行说明，其它发射器请参考相应的发射器说明书。)


对码 重复操作对码步骤即是消除当前码。一台电机最多储存5个发射通道，再新增发射器会循环覆盖最前一个通道。

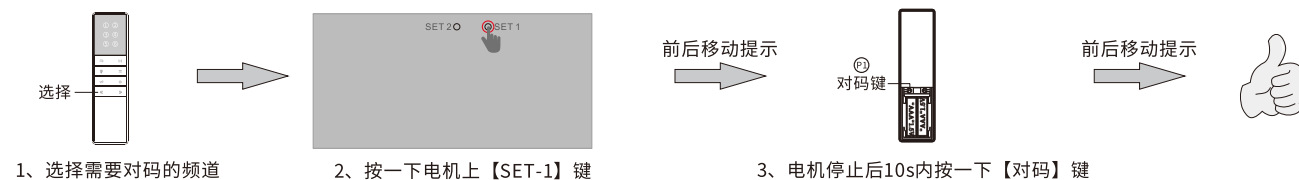

复制 为已经对码的电机新增一个发射器

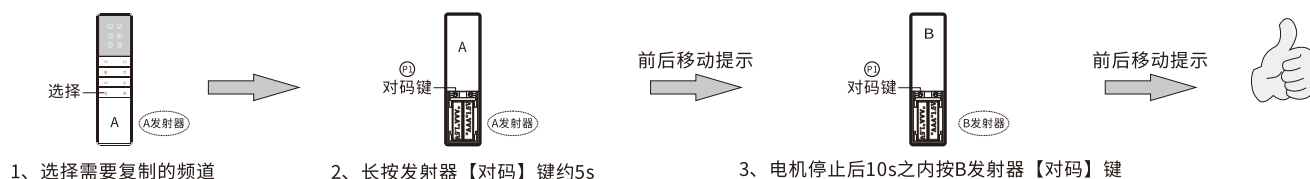

设置中间闭合移动

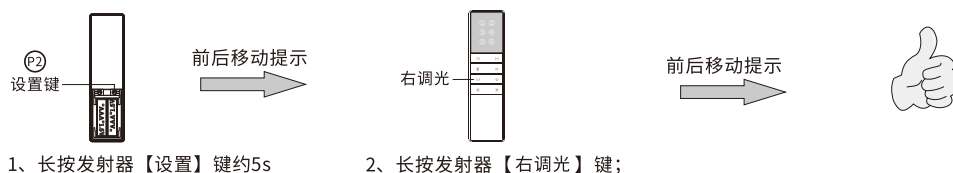

开合行程换向

切换已对上码电机开合行程运行方向，并非是调光行程方向，声控操作开合方向不变。如按发射器打开键，窗帘往关闭方向运行请设置换向操作即可恢复。




开合行程取消

清除已设置好开合行程，并非是调光行程。清除开合行程会影响170度调光操作只有130度调光，请重新设置好开合行程即可恢复170度调光。



开合行程设置


已有开合行程请进行《开合行程取消》设置再进行开合行程设置，要求有开合行程才能设置调光行程。

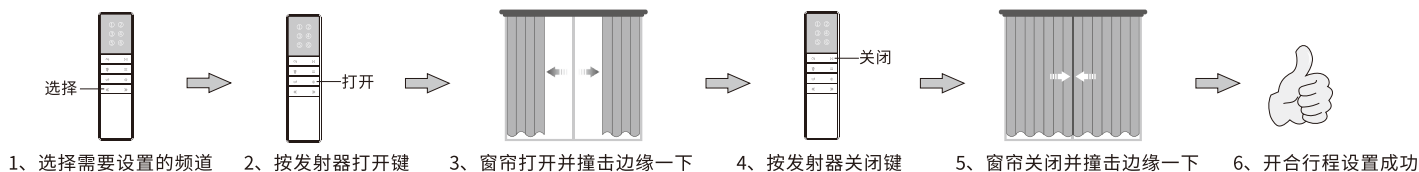

⚠ 注意：在设置开合行程时发现调光帘没有旋转90度时请按发射器调光键调节到90度再设置开合行程，以防止关闭窗帘时左右调光帘互相错位导致走珠损坏。

调光行程设置

注意：设置调光行程时，窗帘必须运行到完全关闭的位置上，否则无法设置调光行程

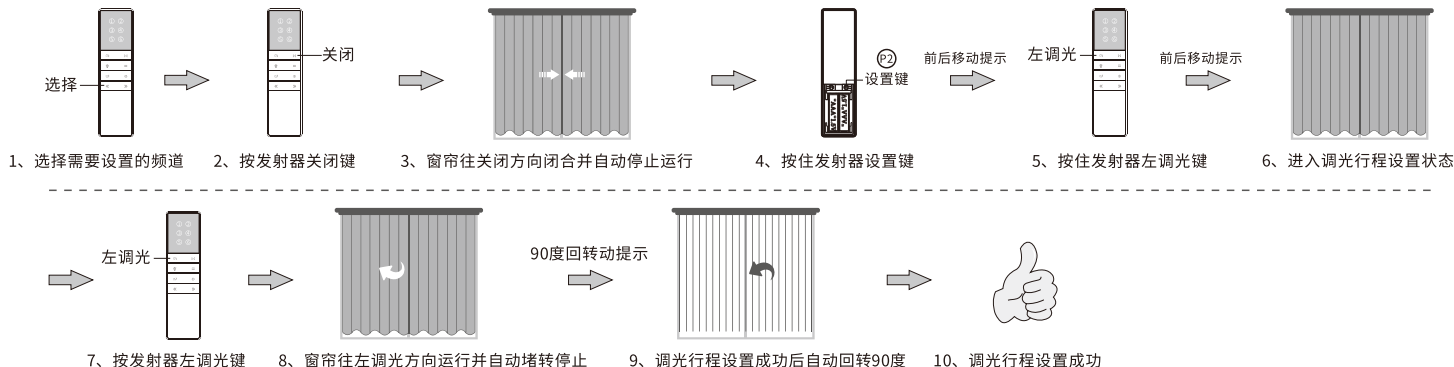

说明：

- 按发射器打开键或关闭键调光帘自动旋转90度位置进行开合运行，如果运行窗帘开合方向时调光帘没有转到90度请重新《调光行程设置》即可恢复正常。
- 窗帘开合在完全关闭的位置上可以进行170度调光，离开关闭的位置上只能进行130度调光。
- 电机在出厂前是没有开合行程与调光行程，窗帘开合时调光帘不会自动旋转并直接开合运行。

氛围灯设置

电机运行时自动打开氛围灯，重复操作即关闭和打开相互切换，关闭后按“开灯”键才可以打开氛围灯：




频道锁定设置


如有6个频道的发射器窗帘只有2套，为了方便操作使用即可自定义锁定指定2个频道。



恢复出厂设置

清除电机上所有设置并恢复至默认状态

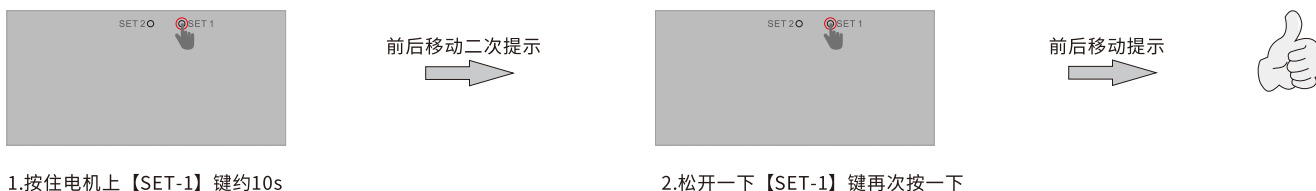

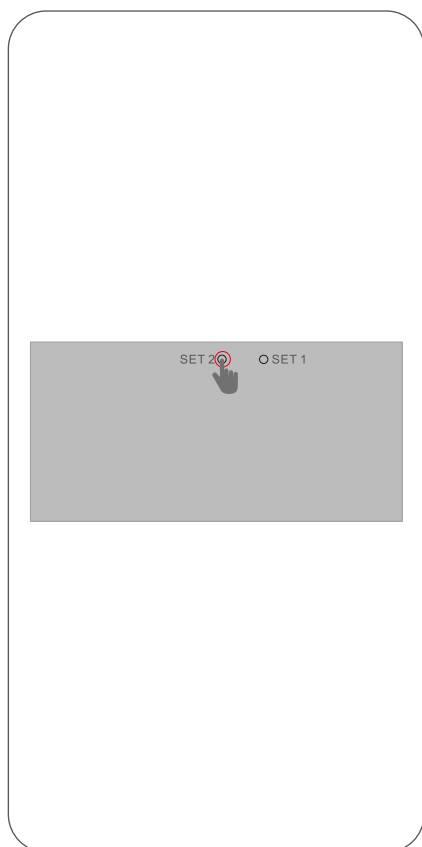


01.电机通电后长按【SET-2】键5秒，指示灯闪烁松开，进入配网状态。
温馨提示:若指示灯已在快闪，请跳过此步骤。



02.打开涂鸦APP，选择右上角的“+”



03.选择“添加设备”

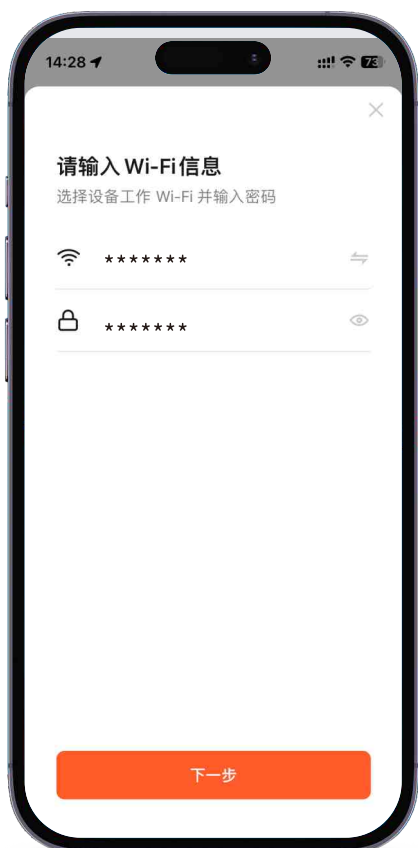

04.输入WiFi密码



05.选择“添加”




06.最终操作界面如上图所示

Q2-LED-Right Dream/Vertical Blinds Motor Manual


reserves the right to change the product design and manual without prior notice. The pictures are for reference only.

A/1 H12210

Motor Introduction Take the Q2-LED-right Dream/Vertical Blinds motor as an example to illustrate

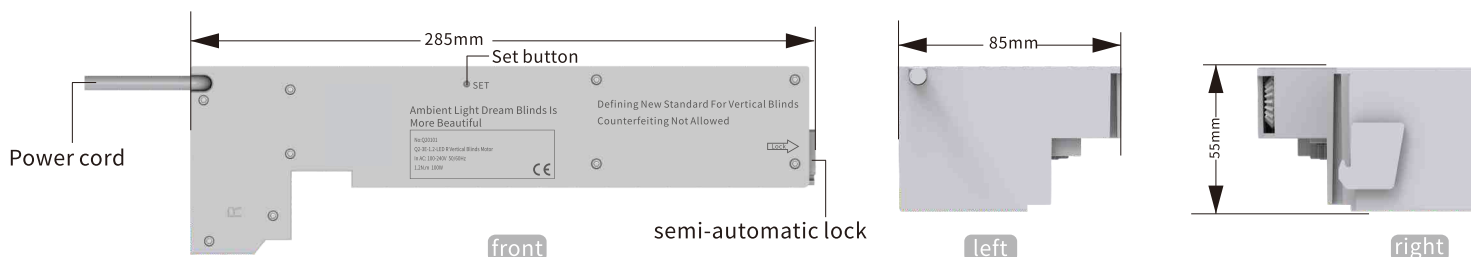


Transmitter Introduction

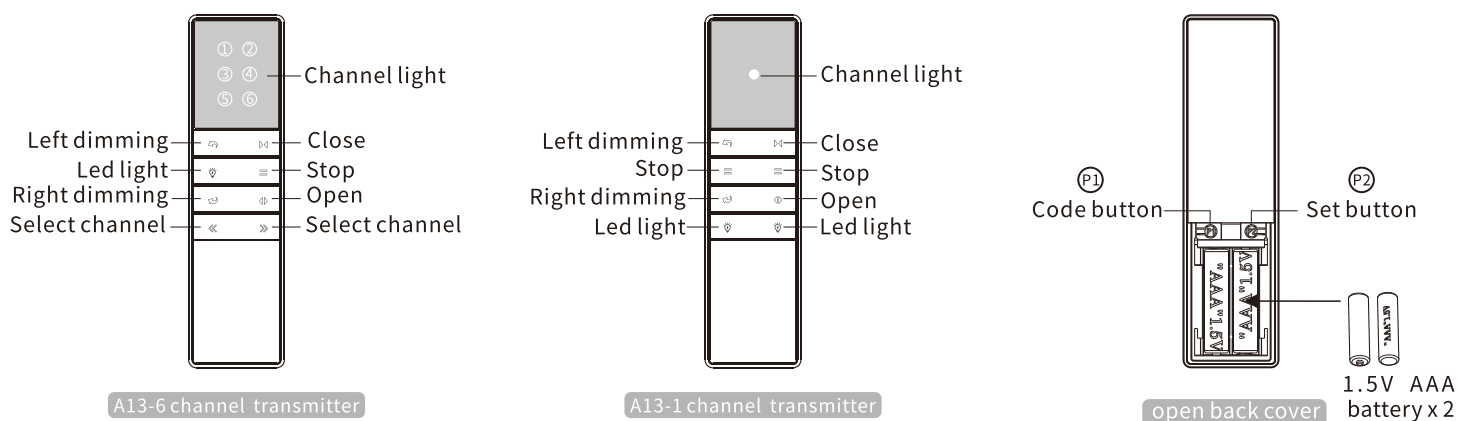


Instructions Take A13 button transmitter as an example for illustration, please refer to the corresponding manual for other transmitters


Code pairing Repeat the code pairing step to eliminate the current code. One motor can store up to 5 channels, adding a new channel will only cover the first channel. For example, current paired channels are 1~5, if you add channel 6, paired channels will be 2~6.

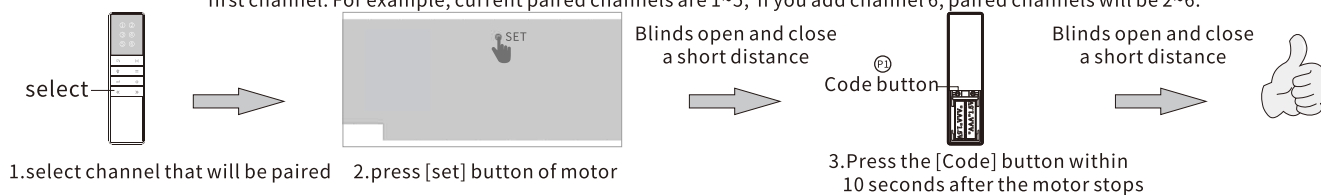

Copy Add a new channel to control motor. (No need to touch motor):

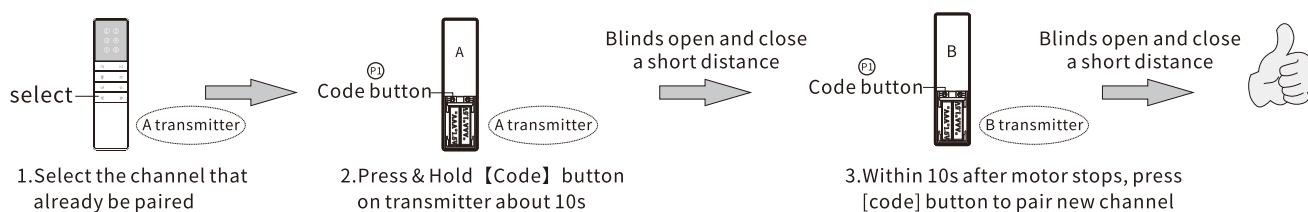


Set the center closed move

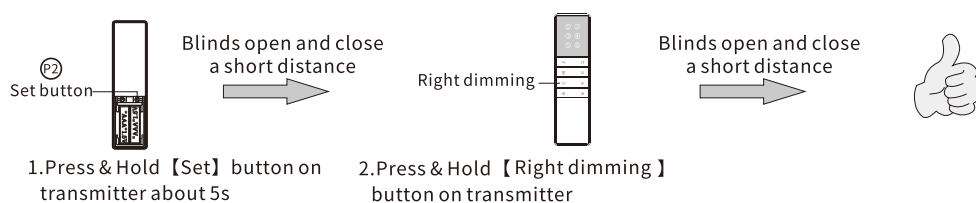


Change direction of opening and closing

If press remote [open] button, but blinds closes. Set it. This setting will not change dimming direction.

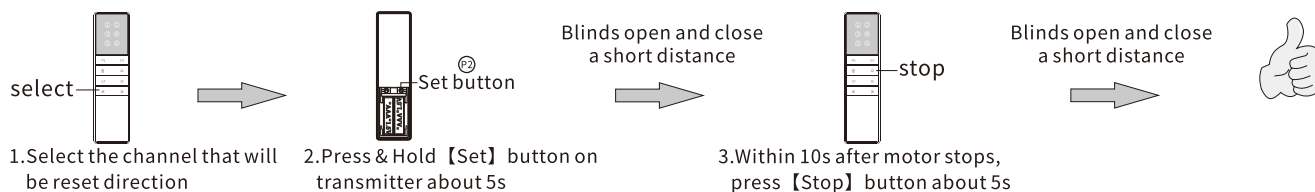


Delete the limit of opening and closing

This setting will not change limit of dimming, but it will change max dimming 170 degree to 130 degree. The max dimming degree will be 170 after opening and closing limit setting is finished.

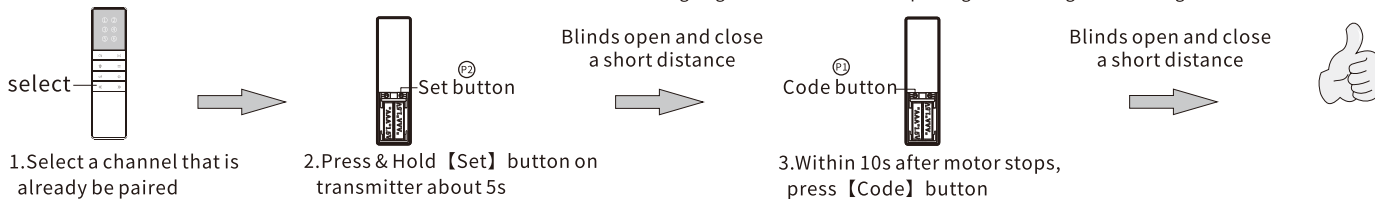

Set limit of opening and closing


If limit of opening and closing is not suitable for current track, please do above steps to delete limit firstly, then set new limit as below steps. (limit of opening and closing is required to set limit of dimming.)

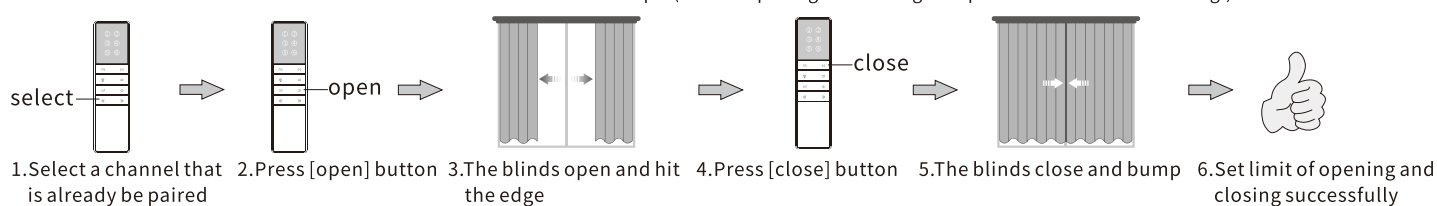

Note: If blinds degree is not 90 (means not perpendicular to the track) when you set limit of opening and closing, please press transmitter dimming button to adjust to 90 degree. If not, the misaligned left and right blinds maybe destroy the runners when closing

Set limit of dimming

Note: When setting the dimming limit, the binds must run to the fully closed position, otherwise the dimming limit cannot be set

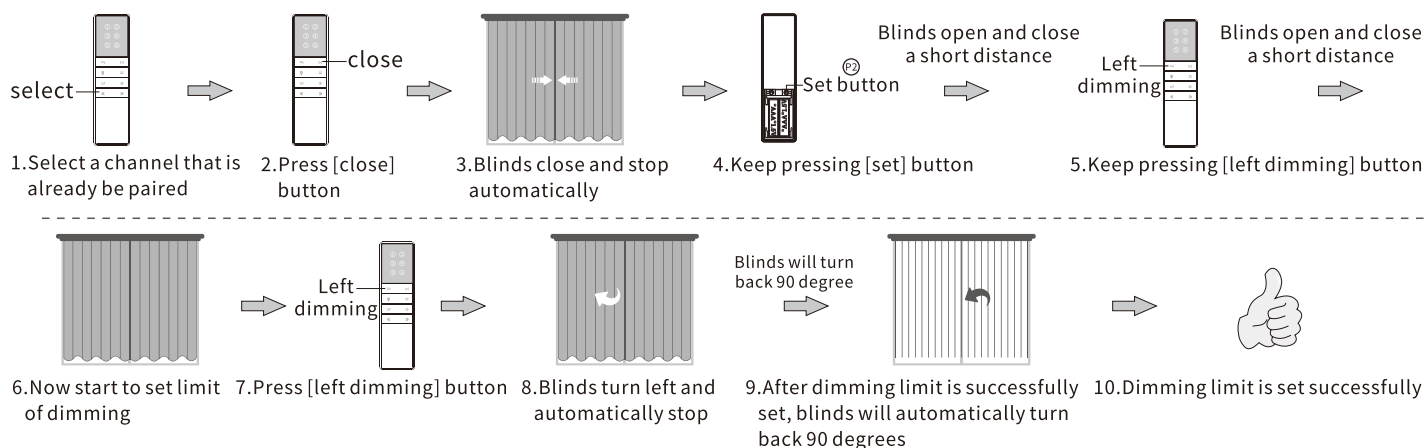


Note:

- When press [open] or [close] button, the blinds will turn to 90 degrees (perpendicular to the track) automatically, then start to open or close. If it is not 90 degrees when opening or closing please re-set limit of dimming
- When blinds is on fully closed position, max dimming degree is 170. If on other position, max dimming degree is 130
- Motor does not have any limit at factory, so the blinds will not do this action: turn automatically and then open or close


Ambient light setting

Default: ambient light is automatically turned on when motor is running. After below setting light will not turn on when motor is running. Repeat the setting, light will turn on when motor is running. When light off, press the "On Light" button of remote to turn on the light.

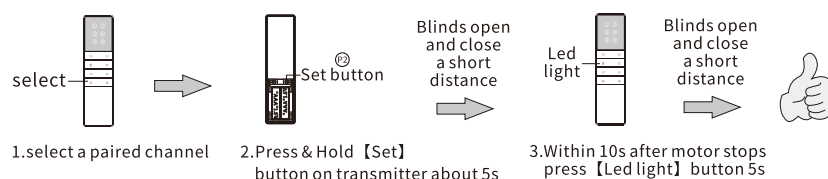


Lock transmitter channel

For example, the transmitter has 6 channels. There are only two blinds. In this case you can lock transmitter channels from 6 to 2

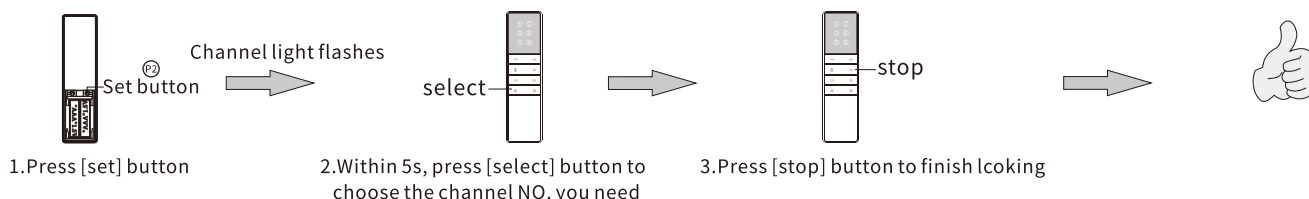

Factory reset


clear all settings on the motor

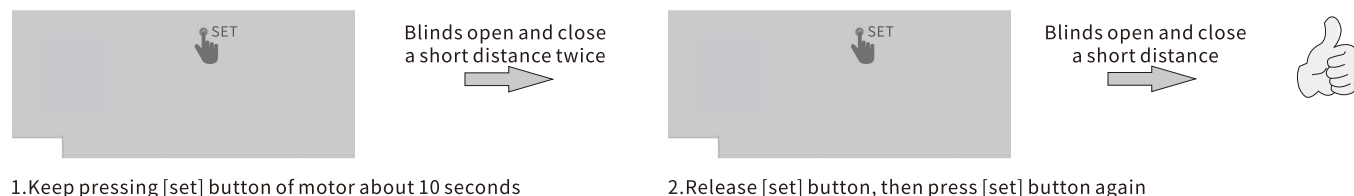


Manual Of NTY Wifi Vertical Blinds Motor

Company reserves the right to change the product design and manual without prior notice. The pictures are for reference only, and the actual product shall prevail. A/1 H12211

WiFi configuration method one (direct connection)

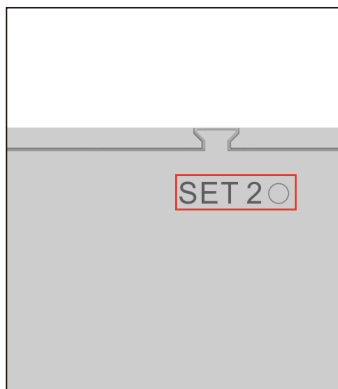

1. Power on, press and hold the [SET2] button for 5 seconds, the indicator light flashes continuously and releases, and now can start network configuration. Reminder: If the indicator light is flashing fast, please skip this step.

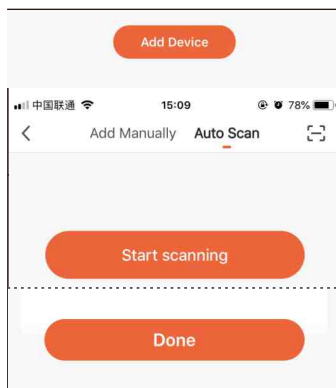


2. Click "Add Device", select Auto Scan, the indicator light will go out after successful connection.




3. The final operation interface is shown in the figure above.

WiFi configuration method two (scan the QR code)

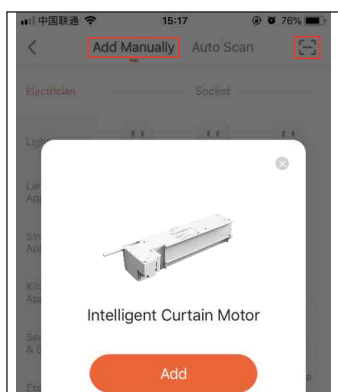

1. Open the APP, select "Add Device"; select the "Scan" icon in the upper right corner, scan the QR code, and select Add after the "Intelligent Curtain Motor" appears.

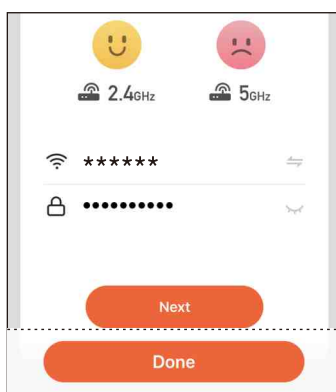


2. Confirm that the WiFi information is correct and the indicator light flashes quickly, click "Next," appears "Added", click "Done".



3. The final operation interface is shown in the figure above.

Clean network

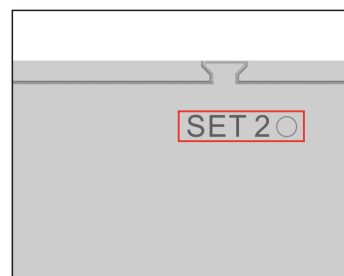

Long press the [SET2] button for 5 seconds, the indicator light flashes continuously and releases. Network cleaned.

QR Code for Configure Network



Configure Network QR Code

Voice service has been activated