


E24-4E天棚帘电机 II 说明书

公司保留更改产品设计与说明书的权利，届时将不另行通知，图片仅供参考，具体以实物为准。


A/O H12153

产品简介

1. 输入电压: DC5V 2A
2. 可使用手机充电器充电
3. 可使用太阳能板充电 (如右图所示)
4. 充电时指示灯常亮, 充满电指示灯熄灭
5. 电量不足时会发出“滴滴滴”报警提示音

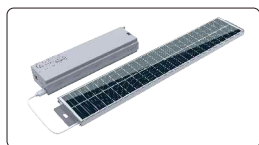

太阳能板充电

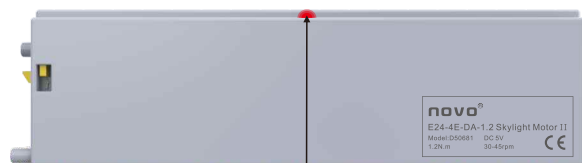

指示灯




Type-C接口



设置键


产品机构图

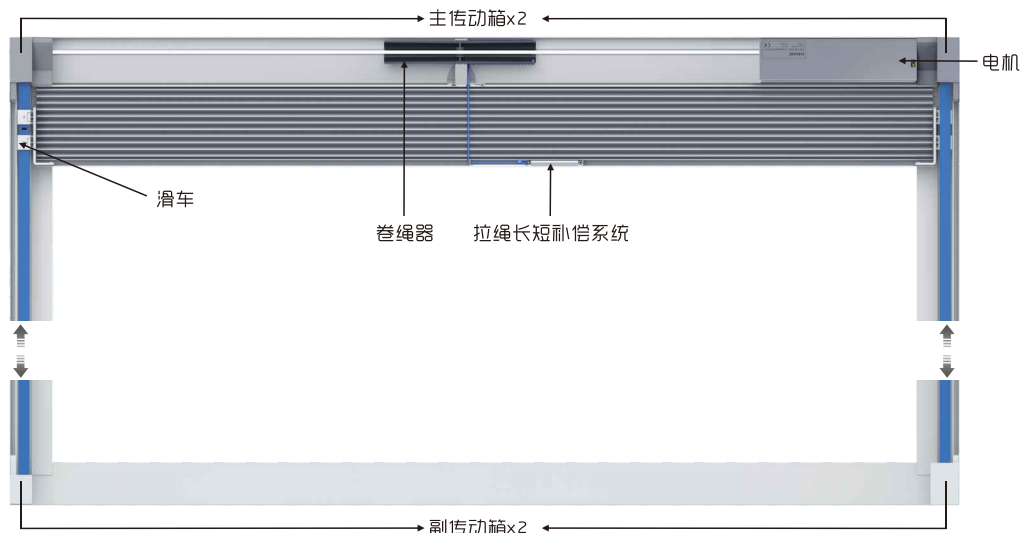


操作说明

(以A13按键发射器为例进行说明, 其它请参考相应的说明书。)


对码: 重复操作对码步骤即是消除当前码。一台电机最多储存5个发射通道, 再增加新发射通道只会循环覆盖最前一个通道:

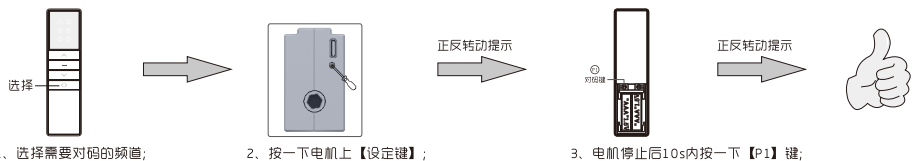


消码: 清除电机上所有接收储存发射器的记忆, 其它设置不会改变或清除:

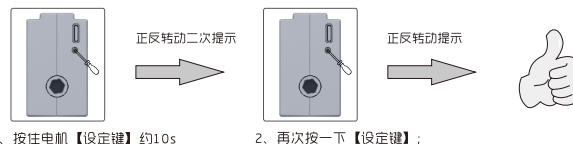


点动/连动模式互换: 电机出厂默认认为连动模式, 切换为点动模式后, 长按住【上行键】或【下行键】约2s电机一直连动运转:

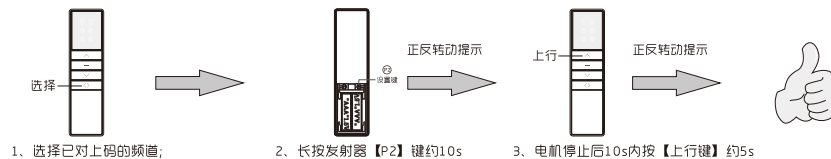


复制: 为已经对码的电机新增加一个发射器:

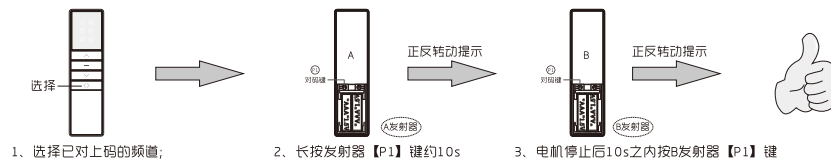


换向: 切换已对上码电机运转方向。如: 换向前, 按发射器上行键, 窗帘往下运行; 换向后, 按发射器上行键, 窗帘往上运行:

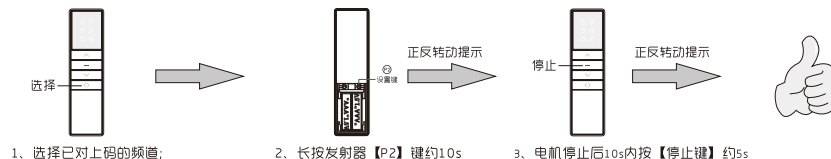


设置行程:

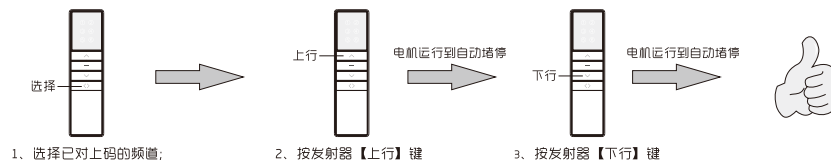


行程微调: 默认行程到位有间隙, 可以设置为无间隙

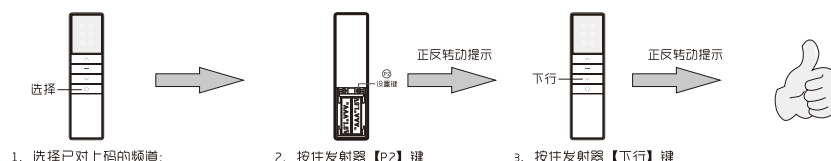

删除行程: 方式一: 在有行程状态下运行过程中堵停一次则会清除行程

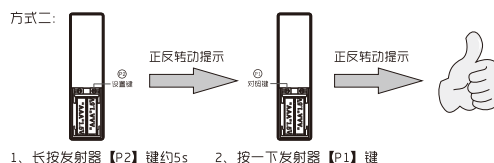

转速设置: 二档转速可调节, 出厂前默认第一档:

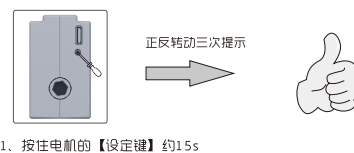


E24-4E Skylight Motor II Operating Manual

Company reserves the right to change product design and specifications without prior notice then, photos are for reference only.


A/O H12153

Features

1. Input voltage: DC5V 2A
2. Can be charged with mobile phone charger
3. Can be charged with solar panel (as shown on right)
4. The indicator light is always on when charging and turns off when fully charged.
5. When the battery is low, a beep beep beep will sound.

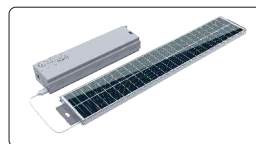

charged with solar panel

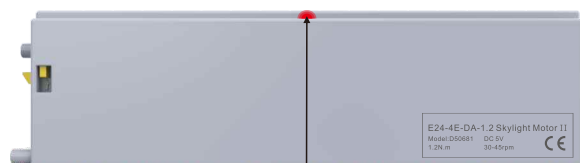


Lights



Type-C

Set


System diagram

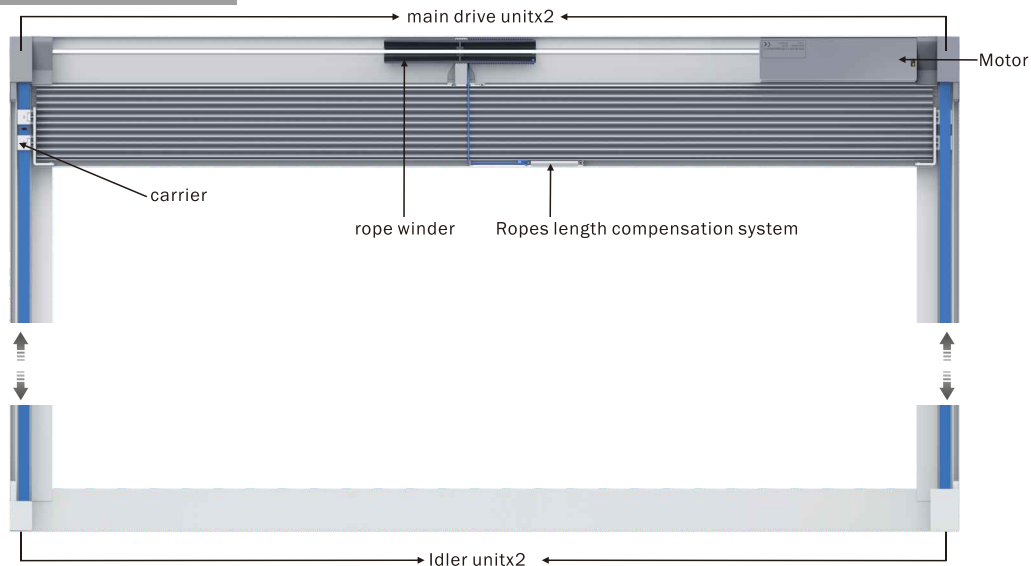

I Instructions (*Take A13 button transmitter as an example. For other transmitters, please refer to the corresponding transmitter manual.)


Pairing transmitter and motor :

Repeat the pairing operation once to eliminate the current pairing. A motor stores up to 5 transmitter channels. Adding a new transmitter channel will cover the earliest channel. For example, current paired channels are 1-5. If you add channel 6, paired channels will be 2-6.

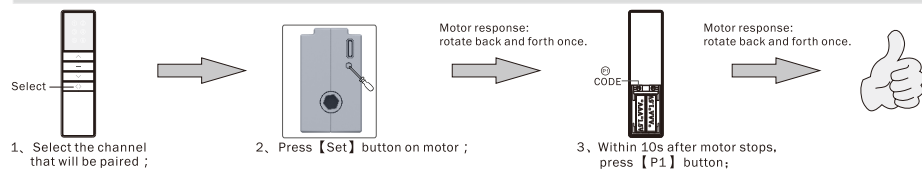

Clear pairing :

 
Clear all pairing on the motor :



1. Press & Hold **[Set]** button on motor about 10s ;
2. Press **[Set]** button on motor again ;


Inching / Continuous moving interchange :

Default is continuous moving. After switching to inching moving, press & hold **[Up]** or **[Down]** button about 2s, motor will continuously moves;

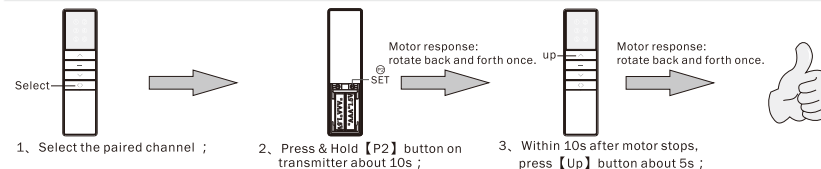


Copy :

Add a new channel to control motor. (No need to touch motor);

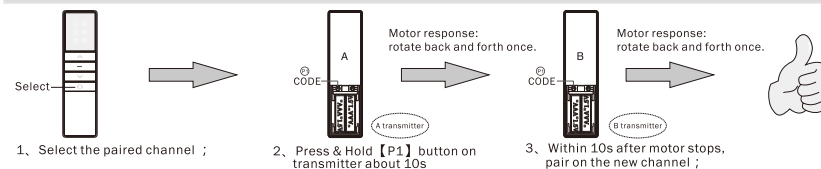


Reset direction :

Reset motor direction. Such as: before reset, press transmitter up button, blinds run down. After reset, press transmitter up button, blinds run up.

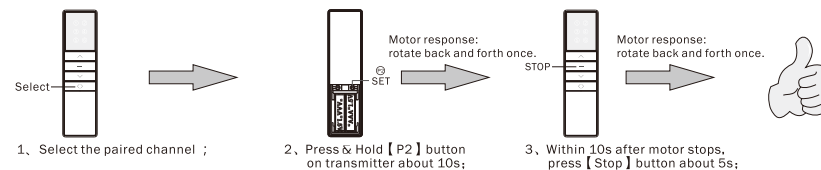


Limit Setting :

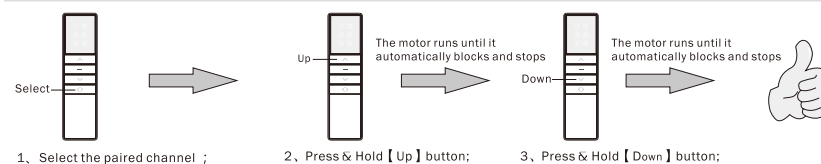


Precise limit:

there is a gap in the default limit position, and it can be set to no gap.

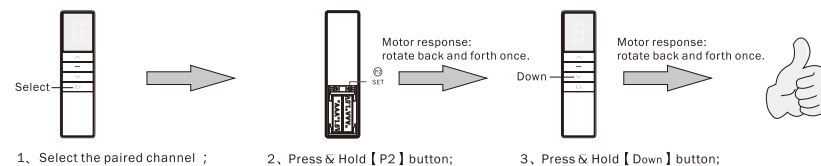


Delete limit :

Mode1: When there is limit, and when motor is blocked and stopped once during operation, the limit will be deleted.

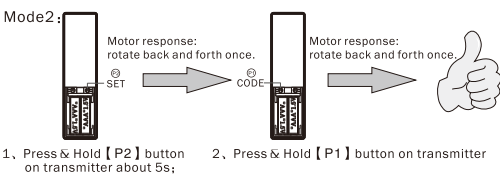

Mode2:

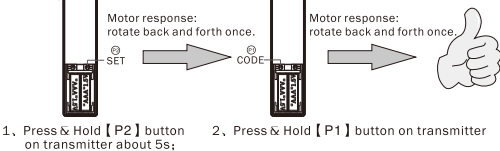

Speed setting :

Two speed can be adjusted. Default is first.

